Gtech

innovation that's right at home

CY01

Cylinder Vacuum Cleaner

Operating Instructions

Table of contents

Table of contents..... p1.

Important safeguards ..... p2.

Unpacking: Part location..... p3.

Assembly..... p4.

Cleaning: using the vacuum cleaner..... p5.
- How to plug in and use.....
- Using the brush on the head.....

- Using the scorpion hard floor head..... **p6.**
- Using the pet hair tool.....

- Using the crevice tool..... **p7.**
- Using the dusting brush.....

- Changing the dust bag..... **p8.**

Care and maintenance..... p9.
- Cleaning the inlet filter.....
- Cleaning the exhaust filter.....

Troubleshooting guide..... p10.

Spares.....
Technical specifications.....

Manual Version: 2005-01
Designed and edited in the UK
Printed in PRC

Important Safeguards

△ **IMPORTANT***:*
READ ALL INSTRUCTIONS BEFORE USE.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

△ **WARNING***:*
When using an electrical appliance, basic safety precautions should always be observed, including the following, to reduce the risk of fire, electrical shock, or injury:

- ✔ Do not use or store the unit outdoors or on wet surfaces.
- ✔ Do not leave the cleaner when plugged in. Turn off the appliance and unplug the cord when not in use and before servicing.
- ✔ Do not use with a damaged cord or plug.
- ✔ If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, return it to a service centre before using.
- ✔ Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- ✔ Do not pull cord to disconnect from socket; grasp the plug and pull to disconnect.
- ✔ Turn off the appliance before unplugging.
- ✔ Do not handle appliance with wet hands.
- ✔ Not to be used as a toy; pay close attention when used by or near children.
- ✔ Use only as described in this manual.
- ✔ Do not use without dust bag or filters in place.
- ✔ Do not use with any opening blocked; keep openings free of dust, lint, hair and anything that may hinder the airflow.
- ✔ Keep hair, clothing, fingers, and all parts of body clear of moving parts.
- ✔ Do not pick up anything that is flammable, burning or smoking.
- ✔ Unplug electrical appliances before vacuuming them.
- ✔ Use extra care when cleaning on stairs.
- ✔ Use only with the manufacturers recommended attachments.
- ✔ The plug must be fitted with a 13A fuse.
- ✔ Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations. Repairs by unqualified persons could be dangerous.

FOR HOUSEHOLD USE ONLY

Unpacking: Part location

1. Vacuum cleaner, main unit
2. Combi-head
3. Scorpion hard floor head
4. Pet hair tool
5. On/off button
6. Cord rewind button
7. “Bag full” indicator light
8. Carry handle
9. Cover latch

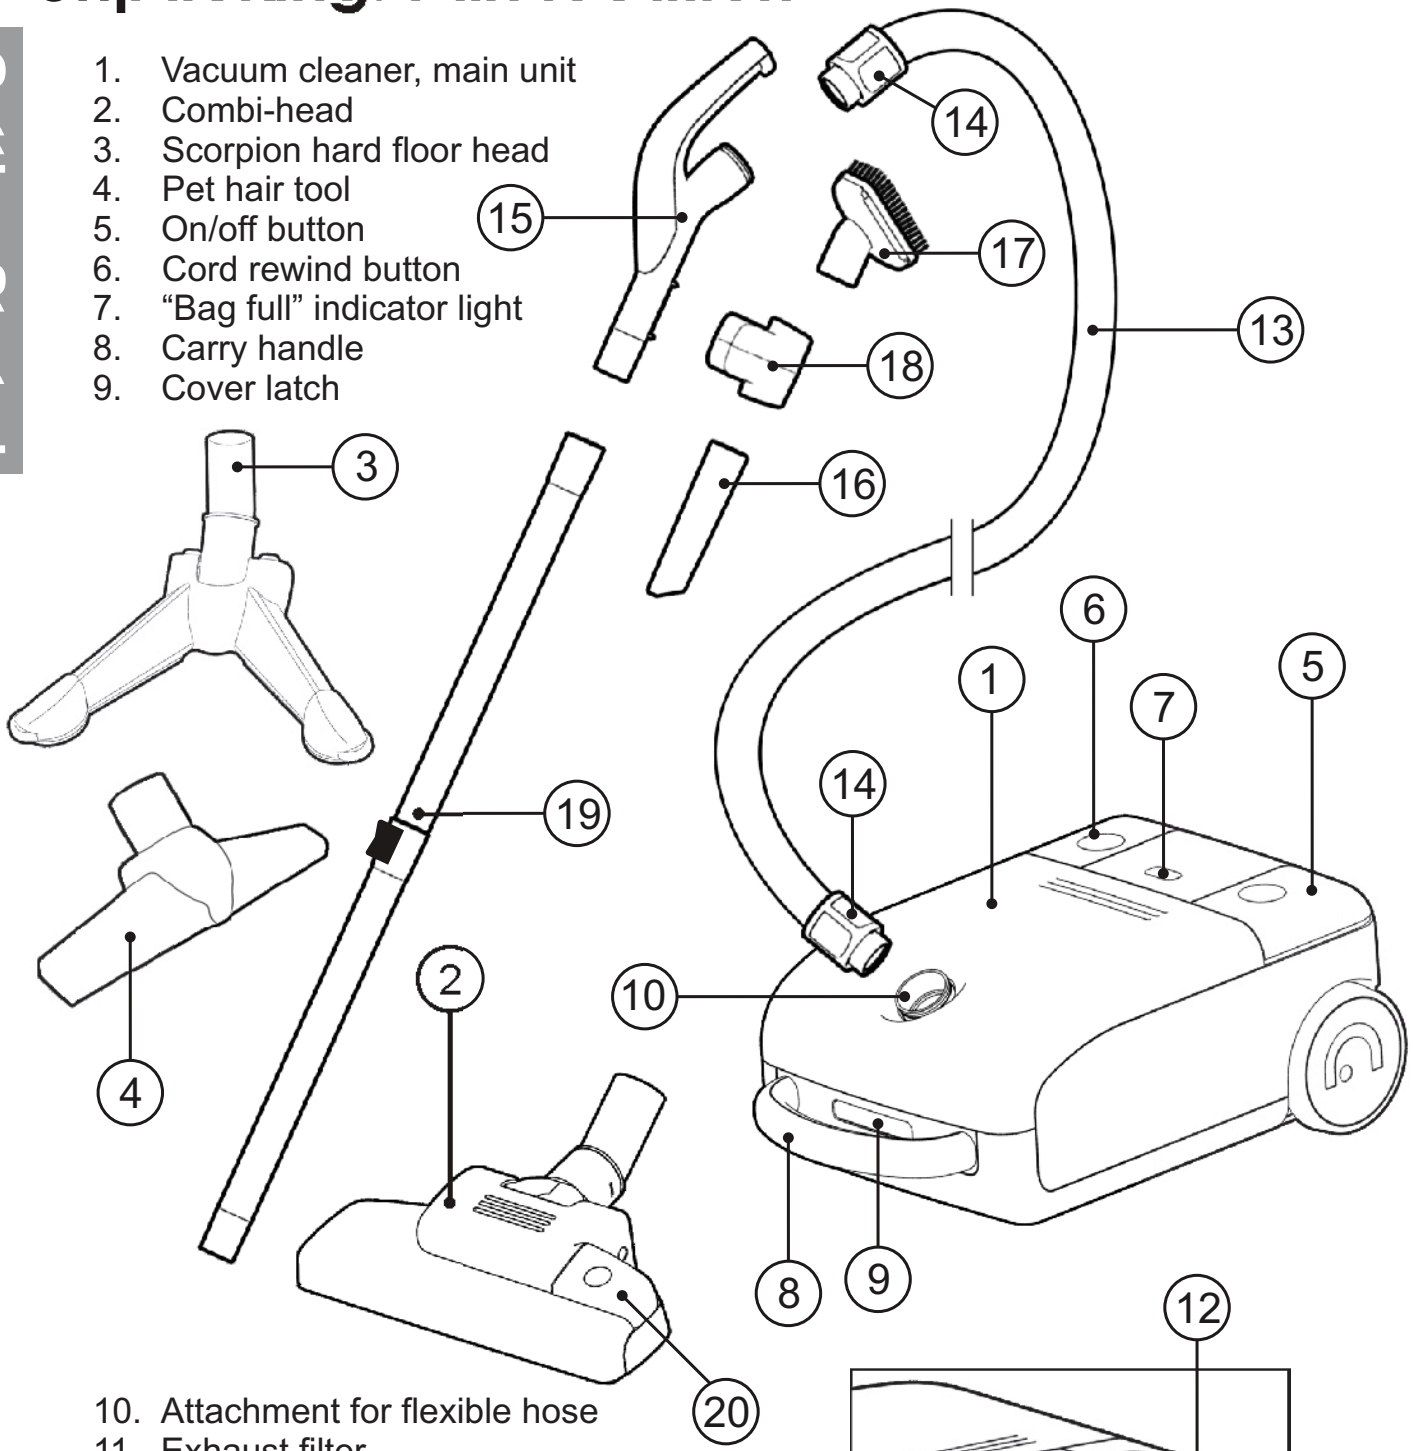

10. Attachment for flexible hose
11. Exhaust filter
12. Power cord
13. Flexible hose
14. Hose End Connector
15. Upper handle
16. Crevice tool
17. Dusting brush
18. Tool clip
19. Telescopic tubes
20. Brush pedal

Assembly

Connecting the flexible hose:

- Push the hose end connector of the flexible hose onto the attachment part on the vacuum cleaner and twist to lock.
- Follow the same procedure to attach the flexible tube to the upper handle.
- To remove the flexible hose from the vacuum cleaner, twist the hose end connector and pull to release. Do not pull the hose itself!

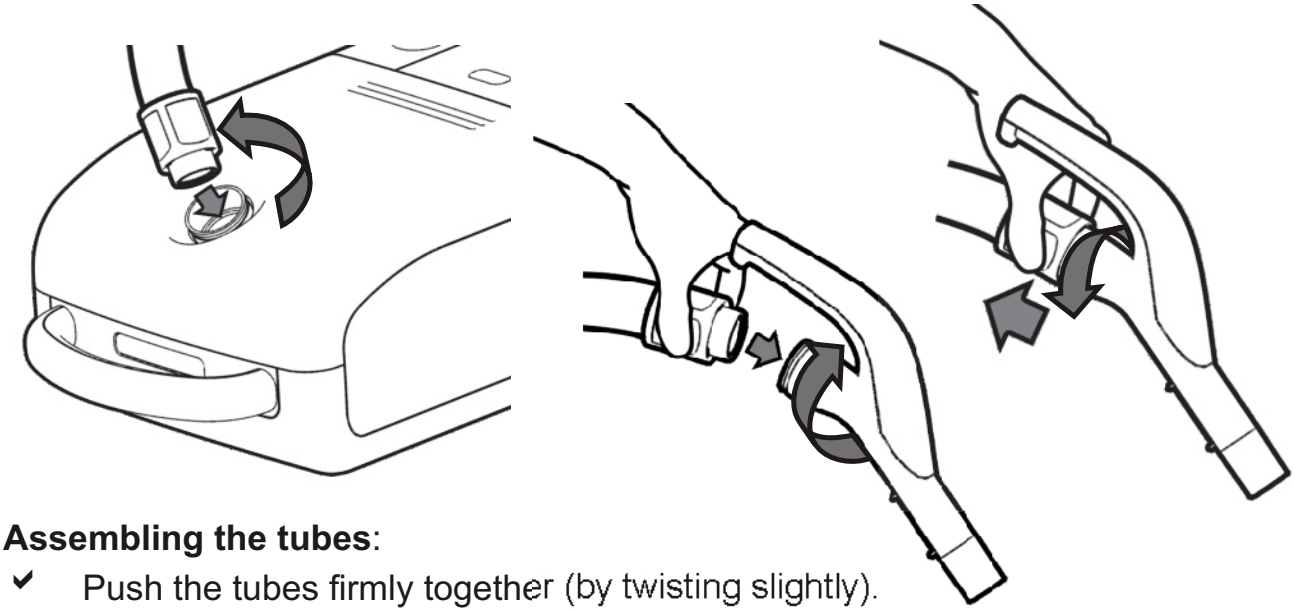

Assembling the tubes:

- Push the tubes firmly together (by twisting slightly).
- Push the head and upper handle onto the ends of the tube.
- Fit the Crevice tool and the dusting brush onto the tool clip, and snap the tool clip onto the handle.

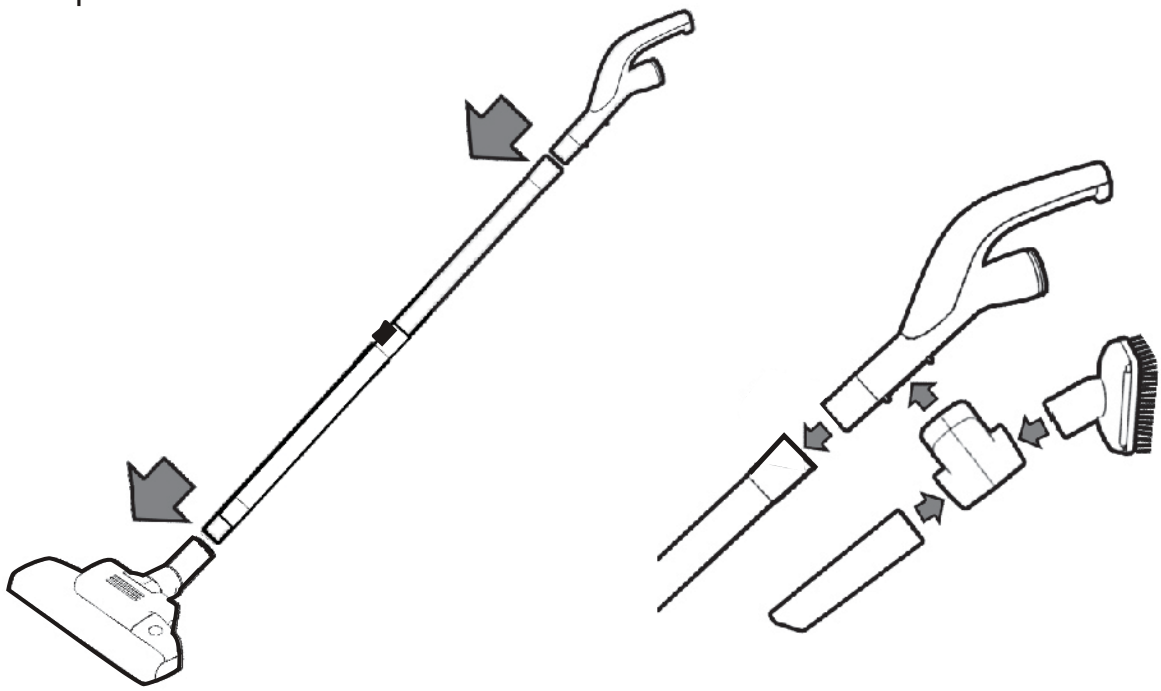

Using the vacuum cleaner

How to plug in and use:

- ✔ Pull out the power cord to the desired length and plug into a socket.
- ✔ To start press the on/off button of the vacuum cleaner. To stop press button again.
- ✔ Remove the plug from the socket. Pull the plug only, not the cord.
- ✔ Press the cord rewind button to rewind the power cord.

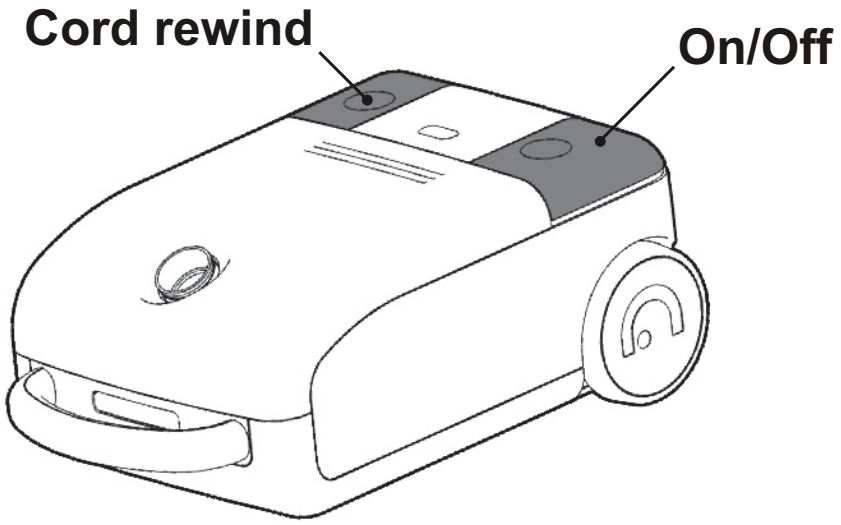

Combi-head: The combi-head has a pedal which allows you to alter its function according to the type of floor to be cleaned.

- ✔ Hard floor position (tiles, parquet floors...) Press on the pedal to lower the brush. (Pedal tilted back)
- ✔ Carpet or rug position. Press on the pedal to lift the brush up.

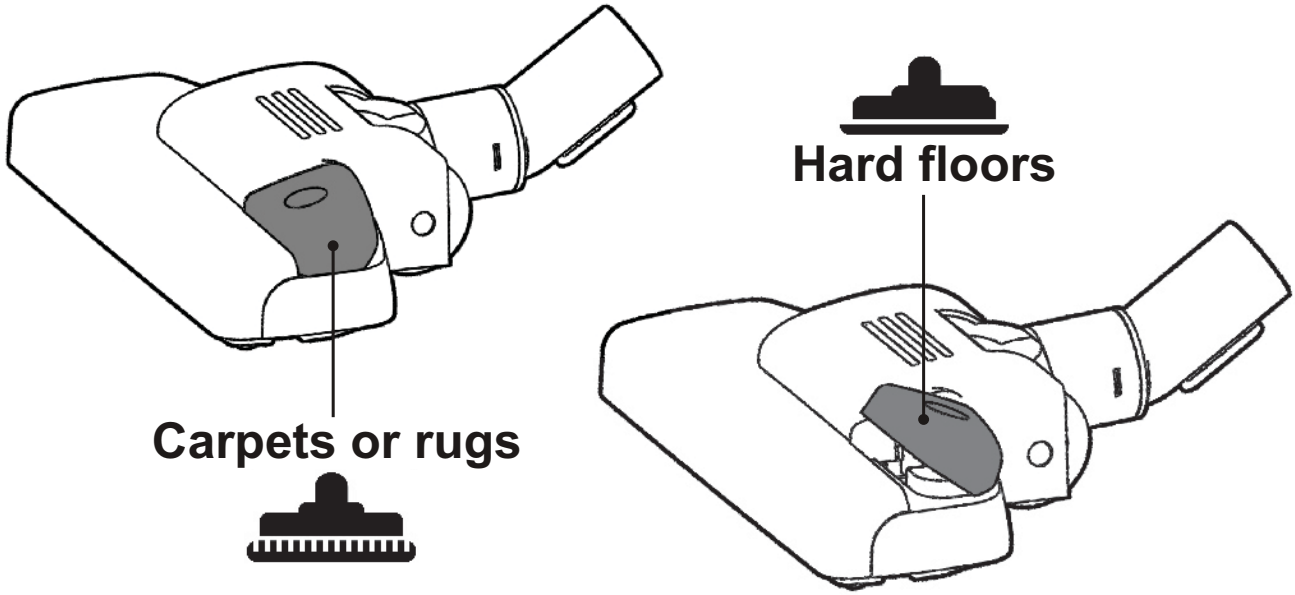

Scorpion hard floor head: The scorpion head is ideal for use on hard floors, for example hard wood floors, tiles, linoleum, polished concrete, etc.

Fit the scorpion head onto the end of the tubes.

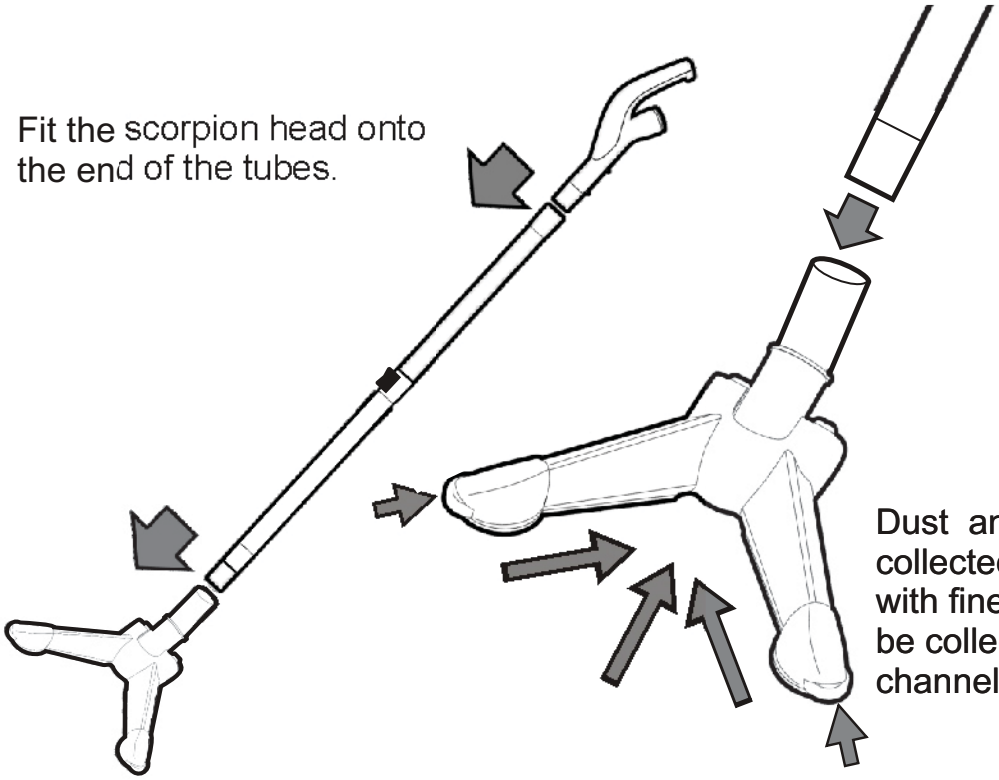

Dust and large objects are collected in the 'v' shape, with finer dust being able to be collected down the channels of the head.

Pet hair tool: The pet hair tool is ideal for cleaning hair from chairs, upholstery and carpets. The pet hair tool can be fitted onto the handle or the extension tubes for extra reach.

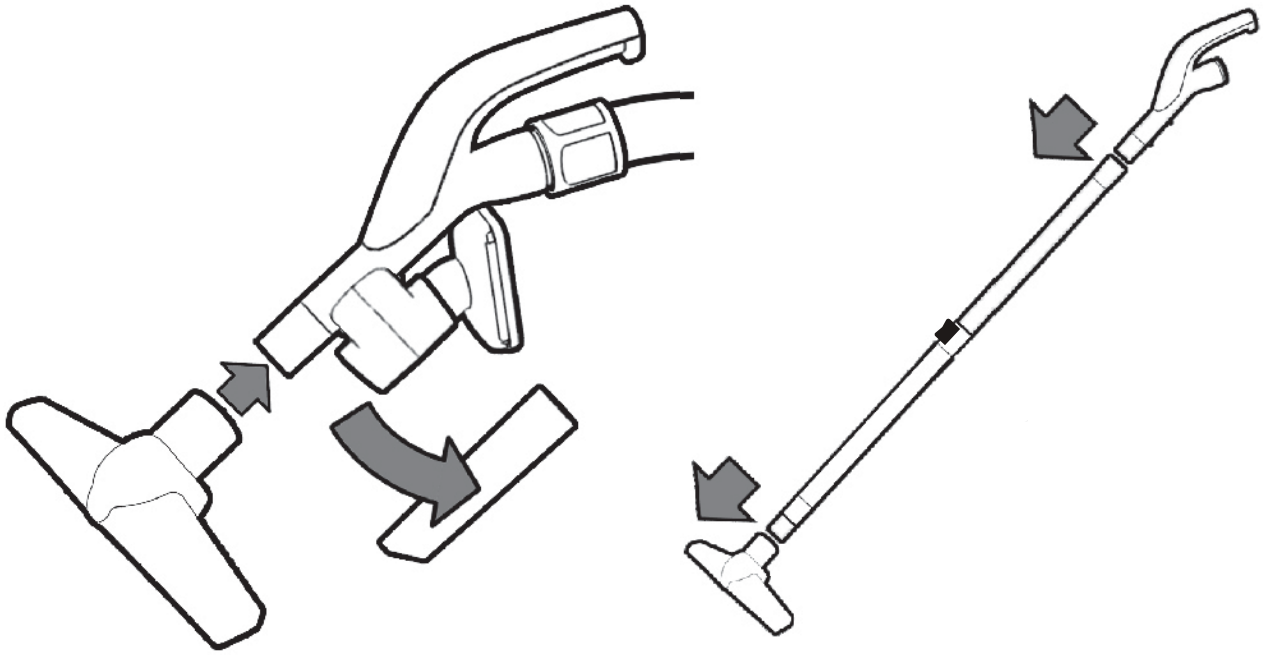

Crevice tool: The crevice tool can be used for vacuuming in those normally inaccessible places like a window frame, a crevice in a wall or creases in the car seats.

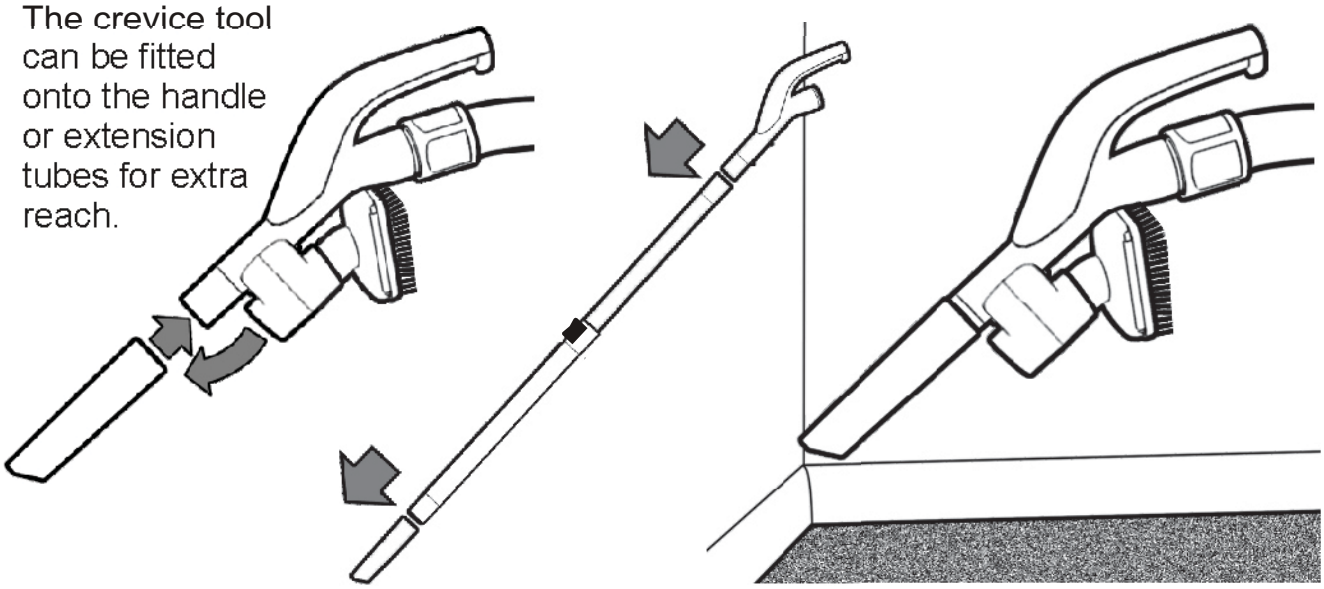

Dusting brush: The dusting brush can be used for vacuuming picture frames, furniture outlines, books and other uneven objects. The dusting brush can fitted to the extension tubes for extra reach.

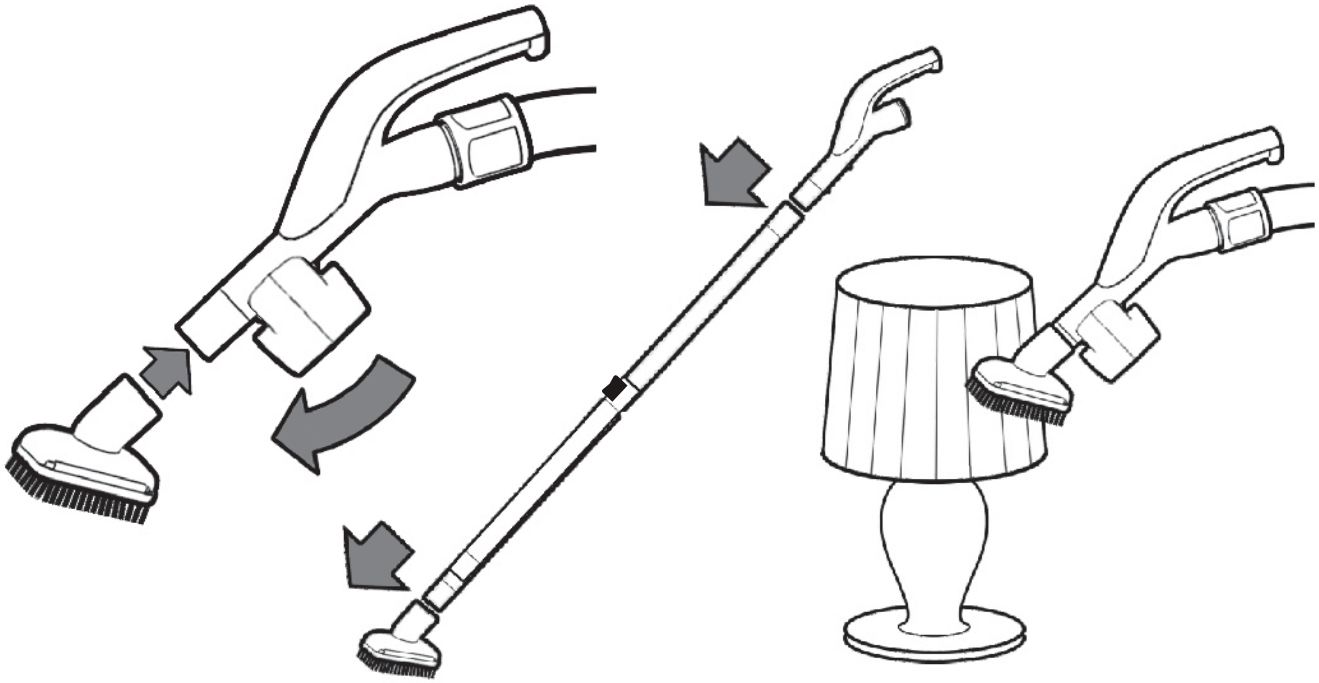

Changing the dust bag:

△ **TURN OFF THE APPLIANCE AND UNPLUG THE POWER CORD FROM THE SOCKET! Pull the plug only, not the cord.**

The dust bag needs changing when the 'bag full' indicator light illuminates. Even if the dust bag does not appear to be full at this stage, it should be changed. It could be that a great deal of fine dust has blocked up the pores of the dust bag.

- ✔ Turn off the appliance and unplug the power cord.
- ✔ Open the bag cover by pushing the cover latch and lifting the cover.
- ✔ To remove the dust bag, slide it out of the bag holder, by pulling the cardboard of the dust bag upwards. Discard the bag.
- ✔ To refit a new bag, push the cardboard support of a new bag fully into the bag holder.

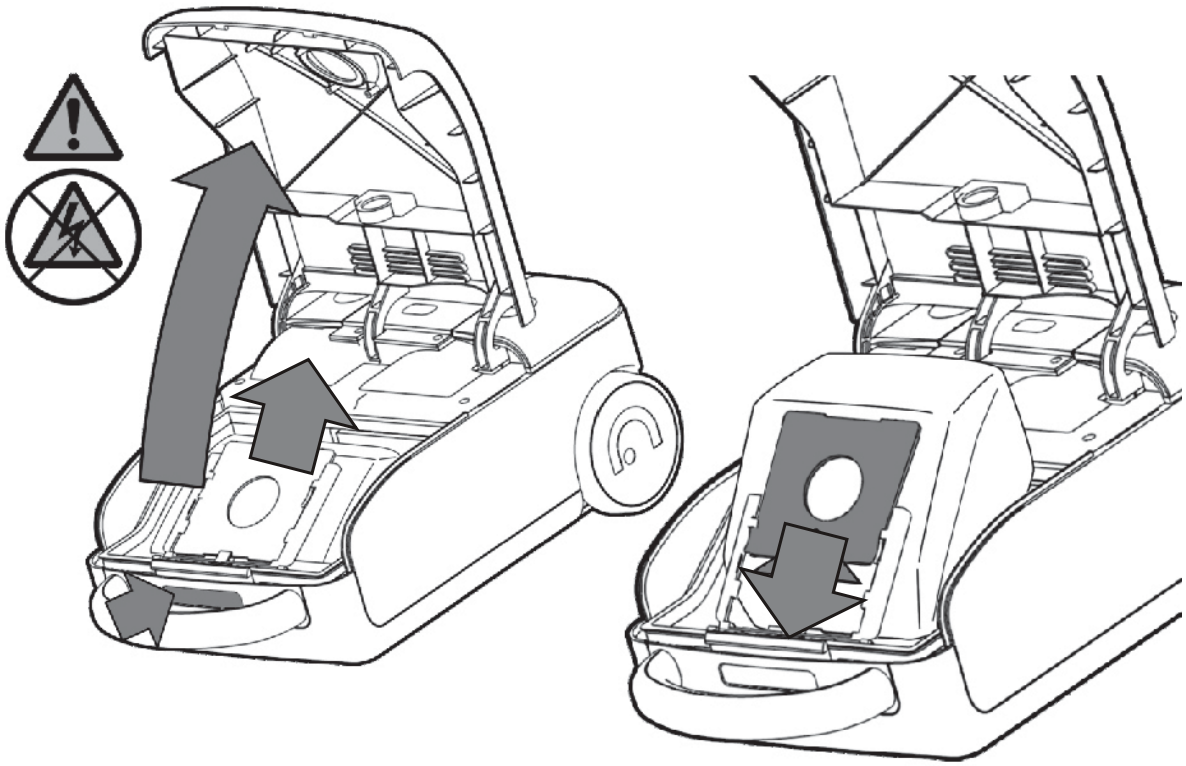

△ **The cover will not close without a bag being fitted, or if bag is not fitted correctly.**

△ **The dust bags are disposable. Once full, dispose of the bag and replace with a new, clean bag. Do not re-use as blocked bags will reduce the efficiency of the vacuum cleaner.**

ⓘ **SPARE DUST BAGS (part number:CY-B1) CAN BE PURCHASED FROM GTECH CUSTOMER SERVICES:**

Tel; 0870 794 4001 Email; sales@greytechnology.co.uk

www.greytechnology.co.uk

ⓘ **USE ONLY SPARE PARTS AS SUPPLIED BY THE MANUFACTURER**

Care and maintenance

Cleaning the inlet filter: The filter needs to be cleaned regularly to ensure optimal operation of the appliance.

△ **TURN OFF THE APPLIANCE AND UNPLUG THE POWER CORD!**

- ✔ This filter is situated inside the cleaner between the dust bag and the motor
- ✔ To remove the filter, slide it upwards out of its mounts.
- ✔ This filter is washable. **After washing, make sure that the filter is completely dry before replacing it in the appliance!**

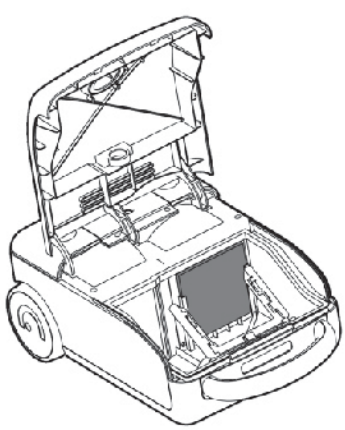

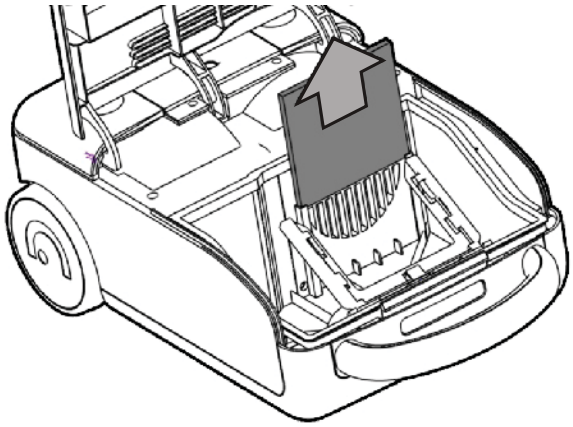

Cleaning the exhaust filter: The filter needs to be cleaned regularly to ensure optimal operation of the appliance.

- ✔ To remove the exhaust filter, remove the filter holder by pushing the latch on the right of the filter holder sideways (left) towards the filter.
- ✔ Remove the exhaust filter from the filter holder.
- ✔ This filter is washable. **After washing, make sure that the filter is completely dry before replacing it in the appliance!**

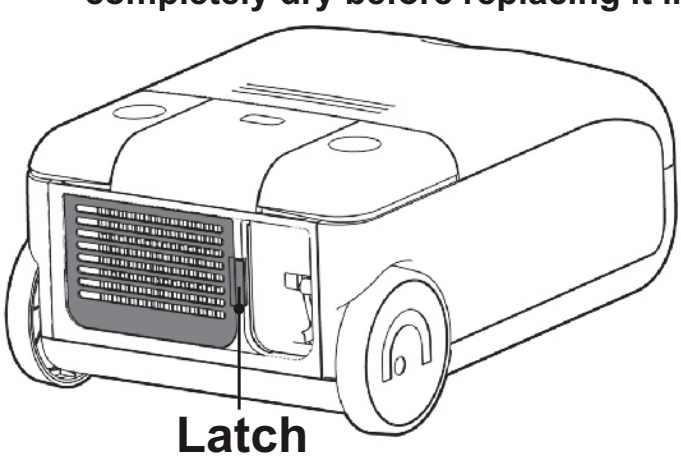

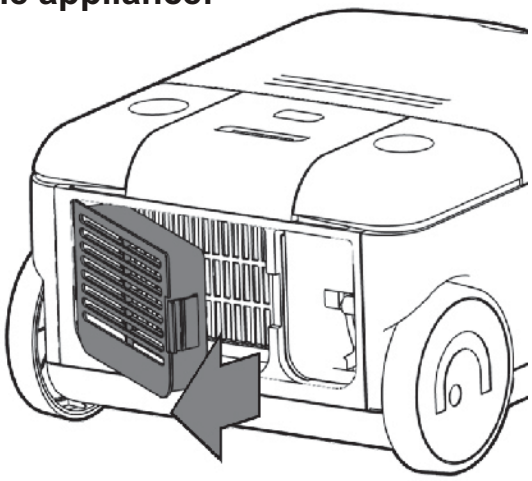

ⓘ **SPARE FILTERS CAN BE PURCHASED FROM GTECH CUSTOMER SERVICES:**

Tel: 0870 794 4001 Email; sales@greytechnology.co.uk
www.greytechnology.co.uk

ⓘ **USE ONLY SPARE PARTS AS SUPPLIED BY THE MANUFACTURER**

Troubleshooting guide

IMPORTANT:

△ **PLEASE, DO NOT RETURN THE APPLIANCE TO THE STORE!** If you have any problems or questions, or if you would like to order spare parts or accessories, please call the Gtech help line on 0870 794 4001 or email sales@greytechnology.co.uk

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Vacuum cleaner will not operate	1. Fuse needs replacing	1. Replace Fuse
	2. Unit needs servicing	2. Call customer service
Vacuum cleaner suction performance reduces	1. Dust bag is full	1. Replace dust bag
	2. Tubes, hose or cleaning tool is blocked	2. Find the blockage and remove the obstruction
	3. Filters are dirty	3. Clean filters or replace if necessary

IMPORTANT: THERMAL CUT-OFF

△ **To prevent the vacuum cleaner from damage caused, it is equipped with a thermal cut-off which switches off the motor in the unlikely event of overheating. If this happens:**

- ✔ Press the on/off button once, and unplug the vacuum cleaner cord from the socket.
- ✔ Allow the motor to cool down for 60 minutes.
- ✔ Check if the dust bag is full and replace if necessary.
- ✔ Check if the filters need cleaning and clean or replace if necessary.
- ✔ Check for any blockages in the head, handle and hose and remove if necessary.
- ✔ If the vacuum cleaner still doesn't start, please, call the Gtech help line on 0870 794 4001 or email sales@greytechnology.co.uk

Spares

ⓘ Spare parts can be purchased from Grey Technology Limited. See below for all contact details. **USE ONLY SPARE PARTS AS SUPPLIED BY THE MANUFACTURER.**

PART	PART NUMBER
Dust bag and filter pack	CY-B1
Cordless vacuum sweeper head	CYA 01

Technical specifications

Power source	220 - 240V AC 50Hz
Power Output	1600W max
Net weight	4.5Kg
Sound level	80dB(A)

Grey Technology Ltd
Unit 1 & 2
Cupola Court
Spetchley
Worcester
WR5 1RL

Tel. (+44) 0870 794 4001
Fax. (+44) 0870 794 4002
Email: sales@greytechnology.co.uk
Web: www.greytechnology.co.uk

© *Copyright Grey Technology Limited 2006*